

## BAOFENG RADIO

### Setting Up A Channel Manually

- 1 Frequency Mode: Key in the frequency desired. This is the receive frequency. (Remain in frequency mode)
  - 2 Set TCTS. (**Menu 13**) For simplex it should be OFF.- Press "MENU" to make selection. Press UP or Down arrow keys to select. Press "MENU" to complete setting. (Hear voice say "Received")  
(EXIT)
  - 3 Set frequency shift, SFT (**Menu 25**). Press "MENU" to select Plus or minus or OFF (Simplex Off.- Press "MENU" (Hear voice say "Received")  
(EXIT)
  - 4 Set the offset frequency. (Generally 000.600) (**Menu 26**) .- Press "MENU" to enter numbers. Press "MENU" (Hear voice say "Received")  
(EXIT)
  - 5 Pick the channel. (**Menu 27**) .- Press "MENU" then up or down arrows to select channel. Press "MENU" (Hear voice say "Received")  
(EXIT)
  - 6A Press the SCAN button momentarily and the transmit frequency will be displayed. Jump to step 7.
- OR
- 6B Key in transmit frequency. For simplex it will be the same as that in step one.
- 7 Pick the SAME channel as you did in step 5. (**Menu 27**) .- Press "MENU." If same channel is not displayed press UP or DOWN key to select channel. Press "MENU" (Hear voice say "Got some cheese")  
(EXIT)
- DONE!